

Piusi AdBlue® Pump Priming

The Piusi Ad Blue® Pump is a centrifugal style of pump that is not self priming. In order to commence pumping of AdBlue® on site you must first prime the pump with the AdBlue® fluid to be dispensed.

To prime the pump

- Remove the hex head plug as highlighted in the image below
- Pour in sufficient AdBlue® liquid to fill the pump.
- Ensure the suction spear is inserted in the Drum / IBC
- Ensure the suction hose into the pump unit is free of any air leaks. If possible bleed all air from the suction hose into the pump unit.
- Ensure the delivery hose has a nozzle mounted on the end of the hose.
- Start the pump

The pump will have to be re-primed each time you change the Drum / IBC for a new container.

